easy wash 365+



Snap ring

108 902 725

Housing ring

108 902 701

180

Coupling 108 901 935


8



⊥

⊥

Low pressure Coupling 1/4" F connection on 108 510 19 the spot weld - side

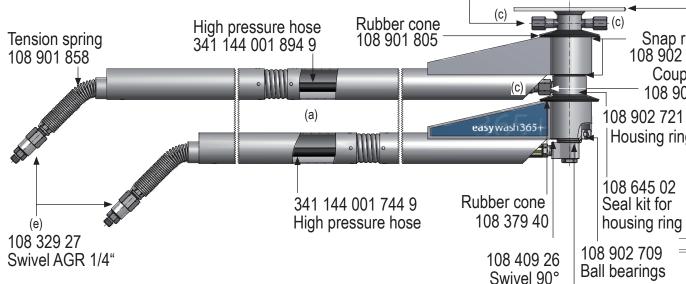

We recommend checking swivelconnections once a year for normal wear and tear.

No greasing required

Mounting plate Attention: hole load bearing capacity max. 20 kN

Please no loads at the end of the

boom arm

Retaining ring Stud bolt 578 109

750 140 2

Seal kit for swivel 90°

Assembly instructions

{----

1. Install the ceiling boom (a) with the mounting plate (b) to the concrete ceiling or to the steel beam.

Attention: bearable hole load (e.g.: bolt M12) at least 20 kN

- 2. Tightly fasten the high pressure hose or the high pressure pipe connection coming from the high pressure pump, to either top or side connection.
- for side inlet: mount adaptor (c) on the side and plug top inlet with stud bolt (d). The low pressure connection is marked with a spot weld on the side of the mounting plate.
- for top inlet: mount adaptor (c) on top and plug side inlet with stud bolt (d).
- 3. Tightly fasten the high pressure hose with lance or brush to the swivel (e).

!\ For your own safety

- Read all instructions before the initial operation. Check their proper condition and that they operate safely.
- Our products should only be installed by experienced users of high pressure equipment
- Always use protection gear when using products connected to high pressure.
- Never direct any high pressure water-jet at humans, animals or electric installations.
- Before any maintenance or nozzle-change, turn off the high pressure water supply, e.g.: turn off and secure the power switch.
- Safety regulations and guidelines (Accident Prevention Rules) from the manufacturer of your high pressure cleaner are applicable.
- Nozzle installation according to Nozzle manufacturer.
- No modifications to the unit are permitted.