


## Spare Parts

# High Pressure Spray Gun ST-810 BSP

Item-No. 20 0810 520

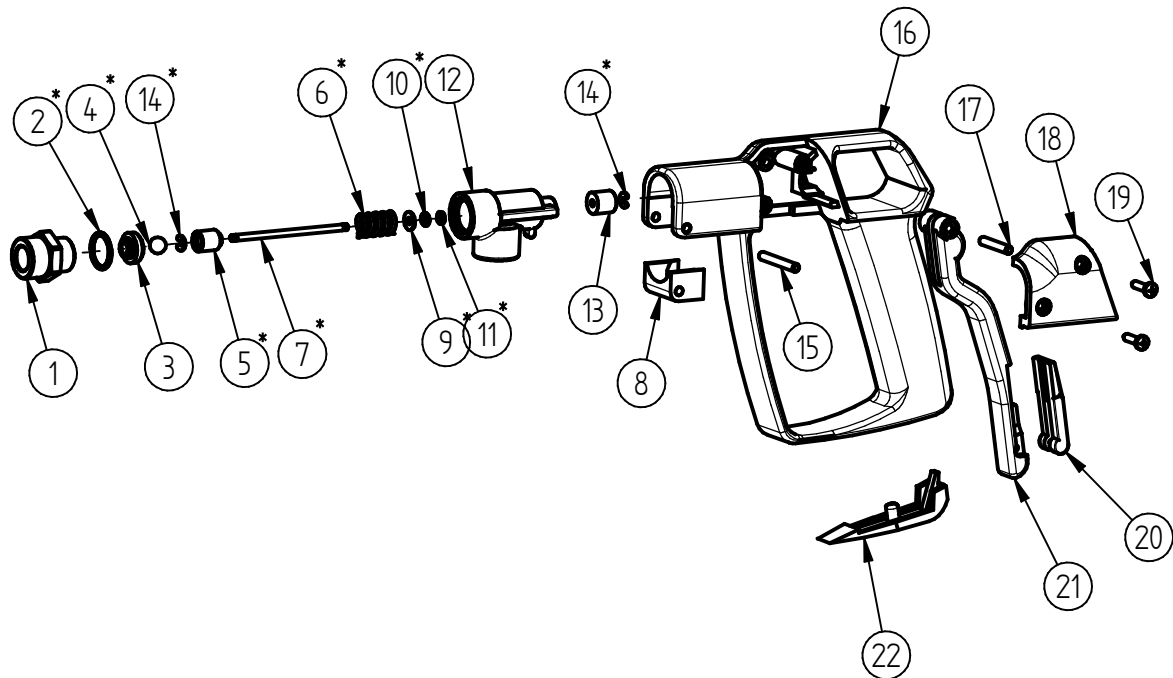

Pos.	Item-No.	Description	Pos.	Item-No.	Description
1	10 0000 090	Outlet Nut	17	01 0001 245	Pin 4x25
2	05 0000 040	O-Ring 14,1x1,6	18	02 0001 760	Cover ST-810
3	02 0000 310	Sealing seat ST-810	19	04 0000 050	Screw
4	04 0000 330	ball	20	02 0001 810	Lock
5	04 0000 675	Ball holder	21	02 0001 800	Trigger ST-810
6	06 0000 560	Pressure spring	22	02 0001 770	Housing cover ST-810
7	04 0000 490	Piston rod ST-810			
8	02 0001 880	Housing cap			
9	01 0000 761	Washer			
10	05 0000 260	O-Ring			
11	05 0000 640	Back ring			
12	01 0000 139	Housing ST-810 G3/8 female			
13	02 0001 790	Washer, plastic			
14	06 0000 195	Lock ring			
15	01 0001 260	Pin 4x32			
16	02 0001 755	Plastic housing ST-810			

## Repair-Kits

Pos.	Item-No.	Description	Pos.	Item-No.	Description
*	20 0810 491	Repair Kit ST-810			